


The Quick Menu

Use the quick menu for quick access to selected options. To view the quick menu, press the **Q** button.

The Quick Menu Display

The quick menu offers different options in photo and movie modes. At default settings, it contains the following items:

Still photography

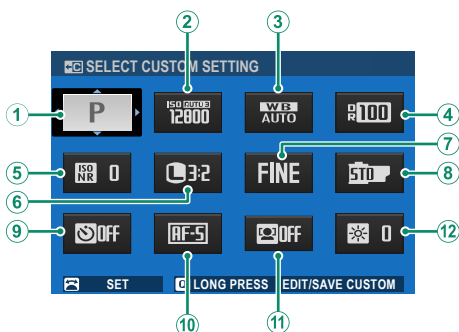

Default

① SHOOTING MODE/ SELECT CUSTOM SETTING	⑦ IMAGE QUALITY
② ISO	⑧ FILM SIMULATION
③ WHITE BALANCE	⑨ SELF-TIMER
④ DYNAMIC RANGE	⑩ FOCUS MODE
⑤ HIGH ISO NR	⑪ FACE/EYE DETECTION SETTING
⑥ IMAGE SIZE	⑫ EVF/LCD BRIGHTNESS

The quick menu shows the options currently selected for items ②–⑫, which can be changed.