





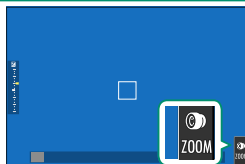


## Touch Zoom


If the lens supports touch zoom, you can zoom in and out by touching the display. Tap the touch zoom button in the display to enable touch zoom.

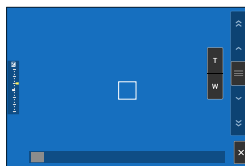

Touch zoom is controlled using the buttons in the display.



Button	Description
 <b>Touch zoom</b>	Enable touch zoom.
 <b>Zoom in</b>	Zoom in or out. Touch and hold to zoom in or out at a constant speed.
 <b>Zoom out</b>	
 <b>Rocker switch</b>	The camera zooms in or out at a speed corresponding to the position of the rocker switch.
 <b>Disable</b>	Disable touch zoom.

 The rate at which the camera zooms in and out in response to the **T** and **W** buttons can be selected using **■ BUTTON/DIAL SETTING > LENS ZOOM/FOCUS SETTING > CONSTANT SPEED ZOOM (Fn)**.