
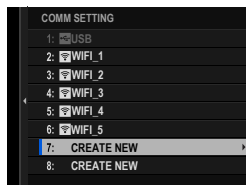



- 6 Select **CREATE NEW** to create a new communication setting profile.

 You can also select or edit existing profiles.




- 7 Adjust **IP ADDRESS SETTING**.

- Select **AUTO** to use an IP address assigned by the network.
- Select **MANUAL** to choose the IP address manually as described in “Connecting Using an IP Address” (📖 265).

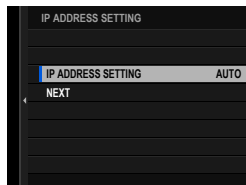

- 8 Select **NEXT** to proceed after adjusting IP address settings.

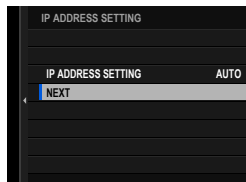

- 9 Name the communication setting profile.



- 10 Save the connection setting profile. Press **MENU/OK**.

