


USER SETTING

Adjust basic camera settings.


To access basic camera settings, press **MENU/OK**, select the **⚙️ (SET UP)** tab, and choose **USER SETTING**.

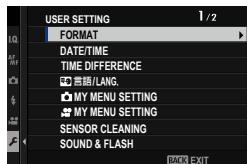


FORMAT

To format a memory card:

- 1 Select **⚙️ USER SETTING > FORMAT** in the **⚙️ (SET UP)** tab.
- 2 A confirmation dialog will be displayed. To format the memory card, highlight **OK** and press **MENU/OK**.

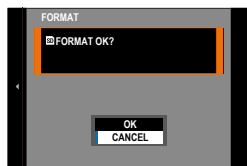

 To exit without formatting the memory card, select **CANCEL** or press **DISP/BACK**.

- ! • All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.
- Do not open the battery-chamber cover during formatting.