

Inserting the Battery

Insert the battery in the camera as described below.


1 Open the battery-chamber cover.

Slide the battery-chamber cover latch as shown and open the battery-chamber cover.


①

- Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could damage image files or memory cards.

- Do not use excessive force when handling the battery-chamber cover.

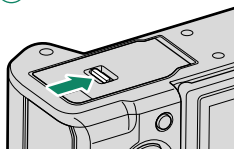

②

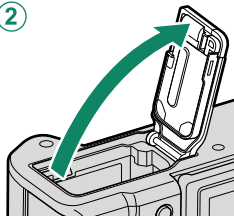

2 Insert the battery as shown.

- Insert the battery in the orientation shown. **Do not use force or attempt to insert the battery upside down or backwards.**

- Confirm that the battery is securely latched.

