


## MOVIE MODE

Before shooting movies, choose the frame rate and the frame size and aspect ratio.

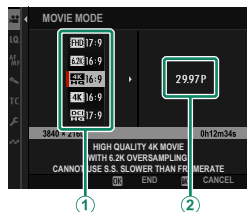

- 1 In the shooting menu, select **MOVIE SETTING**, then highlight **MOVIE MODE** and press **MENU/OK**.
- 2 Press the selector up or down to highlight the desired frame size and aspect ratio ((1)) and press the selector right.
  - Choose **6.2K 16:9** for 6.2 K movies with an aspect ratio of 16:9.
  - Choose **4K 16:9** or **DCI 17:9** for high-quality 4 K movies with aspect ratios of 16 or 17 to 9.
  - Choose **4K 16:9** or **DCI 17:9** for 4K movies with aspect ratios of 16 or 17 to 9.
  - Choose **FHD 16:9** or **FHD 17:9** for Full HD movies with aspect ratios of 16 or 17 to 9.
- 3 Highlight a frame rate ((2)) and press **MENU/OK**.

Options					
23.98P	24P	25P	29.97P	50P	59.94P



The choice of frame rates varies with the movie mode.