


P, S, A, and M Modes

P, S, A, and M modes give you varying degrees of control over shutter speed and aperture.


Mode P: Program AE

Let the camera choose shutter speed and aperture for optimal exposure. Other values that produce the same exposure can be selected with program shift.


- 1 Slide the **STILL/MOVIE** mode switch to **STILL**.

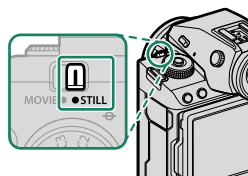

- 2 Rotate the mode dial to P.

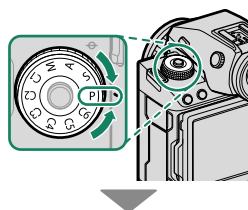

P will appear in the display.

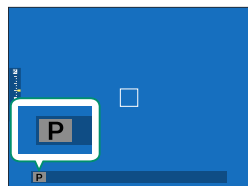

- ❗ If the subject is outside the metering range of the camera, the shutter speed and aperture displays will show "— —".
- Rotate the mode dial only after pressing the dial lock release to release the dial.