



## Aperture Rings

In modes **A** (aperture-priority AE) and **M** (manual), you can choose the aperture (f-number) by rotating the lens aperture ring.

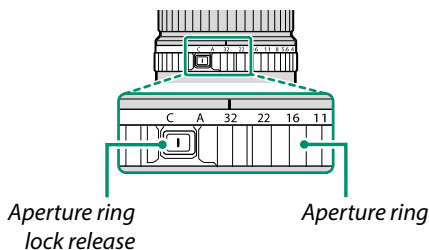


Setting	Description
<b>C</b> (C)	With the aperture ring in the <b>C</b> or <b>A</b> position, you can choose the aperture (f-number) by rotating the camera command dial.
<b>A</b> (A)	
<b>Other values</b> (32, 22, 16, 11)	Set aperture to the selected value.

 To select **C** or **A**, or to select another value after selecting **C** or **A**, press the aperture ring lock release while rotating the aperture ring.

## T/S Lenses

View the shift amount or rotate amount of lenses on the EVF or LCD (25). The shift and rotate amounts are displayed in increments of 0.5 mm and 3°, respectively.



 The shift amount and rotate amount are also recorded to the EXIF data of images that have been taken.