


## The LCD Monitor

You can adjust the angle of the LCD monitor when framing shots, but be careful not to trap your fingers or other objects.

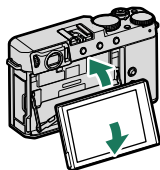


- ❗ • Do not apply excessive force to the hinge when rotating the LCD monitor, as this could damage the hinge.
- Be careful that the corners of the monitor do not contact the camera body, as this could leave marks.

📖 The LCD monitor also functions as a touch screen that can be used for:

- Touch photography (📖 22)
- Focus area selection (📖 21)
- Function selection (📖 24)
- Movie optimized control (📖 23)
- Playback (📖 25)


### Tilting the LCD Monitor

Be sure the LCD monitor doesn't block the eye sensor during shooting, as this will cause the display to flip.

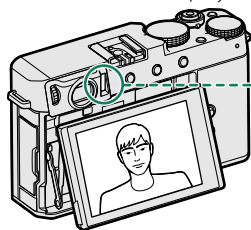

*Normal display*

Eye sensor

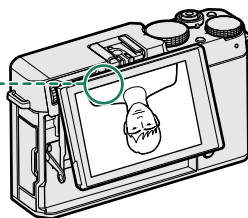

*Display flipped*