


Parts of the Camera

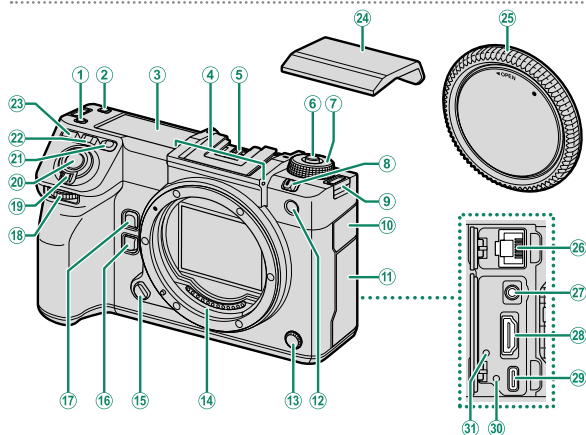

① Secondary monitor backlight button.....	31	⑩ Fn6 button	385
② Fn4 button	385	⑪ Fn5 button	385
③ Secondary LCD monitor.....	28	⑫ Front command dial.....	9, 358
④ Microphone.....	68	⑬ ON/OFF switch	54
⑤ Hot shoe.....	401	⑭ Shutter button	62
⑥ Dial lock release	60, 68	⑮ Fn1 button	385
⑦ Mode dial.....	7	⑯ Fn2 button	385
⑧ STILL/MOVIE mode switch	8, 60, 68	⑰ Fn3 button	385
⑨ Strap eyelet.....	40	⑱ Hot shoe cover	401
⑩ LAN connector cover		⑲ Body cap.....	41
⑪ Connector cover		⑳ LAN connector	
⑫ AF-assist illuminator.....	152	㉑ Microphone/remote release connector (ø3.5mm)	71, 85
Self-timer lamp	164	㉒ HDMI connector (Type A).....	64
Tally light	192	㉓ USB connector (Type-C)	50
⑬ Sync terminal.....	402	㉔ Hole to screw USB cable	
⑭ Lens signal contacts		㉕ Hole to screw cable protector	
⑮ Lens release button	41		

! ㉖ Use of an optional RR-100 remote release requires a third-party adapter to convert the three-pin, ø2.5 mm connector to a three-pin, ø3.5 mm connector.