



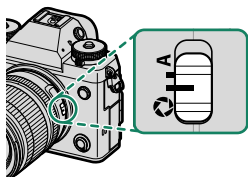
## Mode M: Manual Exposure

In manual mode, the user controls both shutter speed and aperture. Shots can be deliberately overexposed (brighter) or underexposed (darker), opening the door for a variety of individual creative expression. The amount the picture would be under- or over-exposed at current settings is shown by the exposure indicator; adjust shutter speed and aperture until the desired exposure is reached.


- 1 Rotate the **STILL/MOVIE** mode dial to **STILL**.

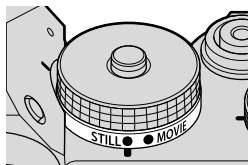

- 2 Slide the lens aperture mode switch to .



- 3 Rotate the shutter speed dial to select a shutter speed other than **A**.

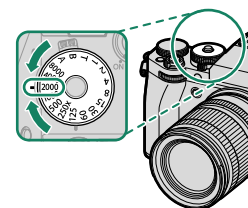

**M** will appear in the display.

