


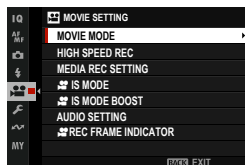
## MOVIE SETTING (Still Photography)

Adjust options for movies shot during still photography using function buttons that have been assigned **MOVIE RECORDING RELEASE**.


To display movie settings, press **MENU/OK** in the photo shooting display and select the  (**MOVIE SETTING**) tab.




The options available vary with the shooting mode selected.




### MOVIE MODE

This item is also found in the movie menu ( 188). Changes here also apply to the item in the movie menu.

### HIGH SPEED REC

This item is also found in the movie menu ( 189). Changes here also apply to the item in the movie menu.

### MEDIA REC SETTING

This item is also found in the movie menu ( 190). Changes here also apply to the item in the movie menu.