


Front-of-Camera Function Buttons

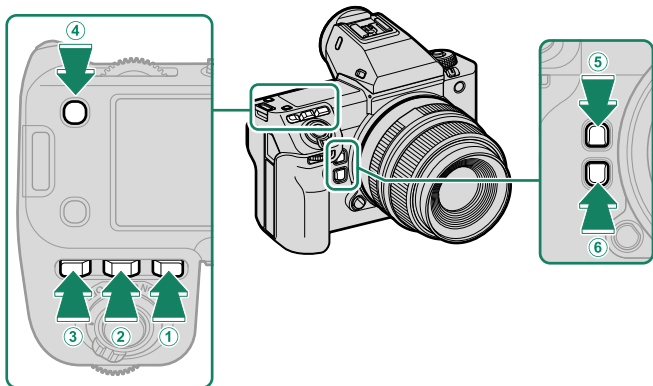

Function buttons	Default
① Fn1 button	FACE DETECTION ON/OFF
② Fn2 button	SUBJECT DETECTION ON/OFF
③ Fn3 button	EXPO. COMP.
④ Fn4 button	SUB MONITOR MODE
⑤ Fn5 button	PERFORMANCE
⑥ Fn6 button	ELECTRONIC LEVEL SWITCH