



The LCD Monitor


The LCD monitor can be tilted for easier viewing, but be careful not to touch the wires or trap fingers or other objects behind the monitor. Touching the wires could cause camera malfunction.

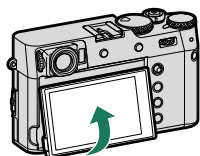


 The LCD monitor also functions as a touch screen that can be used for:

- Touch photography (📖 25)
- Focus area selection (📖 24)
- Function selection (📖 27)
- Muting camera controls during movie recording (📖 26)
- Full-frame playback (📖 28)

The Eye Sensor

- The eye sensor may respond to objects other than your eye or to light shining directly on the sensor.
- The eye sensor can be disabled using  **SCREEN SET-UP > VIEW MODE SETTING.**

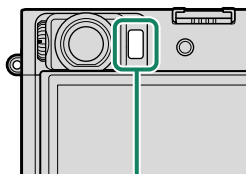

Eye sensor