
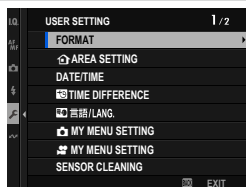


USER SETTING



Adjust basic camera settings.


To access basic camera settings, press **MENU/OK**, select the  (SET UP) tab, and choose **USER SETTING**.



FORMAT

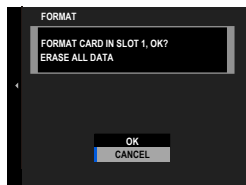
To format a memory card or USB-connected SSD:

- 1 Select  **USER SETTING** > **FORMAT** in the  (SET UP) tab.
- 2 Highlight the slot containing the card you wish to format and press **MENU/OK**.



 An SSD connected to the USB connector can also be selected.

- 3 A confirmation dialog will be displayed. To format the memory card, highlight **OK** and press **MENU/OK**.

 To exit without formatting the memory card, select **CANCEL** or press **DISP/BACK**.



- ! • All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.
- Do not open the battery-chamber cover during formatting.

 The format menu can also be displayed by pressing and holding the center of the rear command dial while pressing and holding the  (Delete) button.