
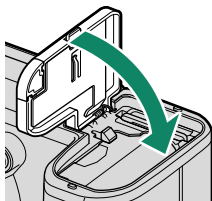


4 Close the battery-chamber cover and slide the battery-chamber latch closed.


 If the cover does not close, check that the battery is in the correct orientation. Do not attempt to force the cover shut.




Removing the Battery

Before removing the battery, *turn the camera off* and open the battery-chamber cover.


To remove the battery, press the battery latch to the side, and slide the battery out of the camera as shown.

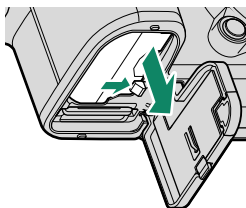



 The battery may become hot when used in high-temperature environments. Observe caution when removing the battery.

Removing Memory Cards

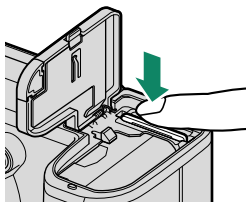To remove the memory card, press it in and release it slowly. The card can then be removed by hand.



 • Press the center of the card.
• Suddenly removing your finger from the card could cause the card to fall from the slot. Remove your finger slowly.
• If the camera displays a  icon, the memory card may be hot to the touch. Wait for the card to cool before removing it.