




Viewing Movies


View movies on the camera.



Viewing Movies During Playback

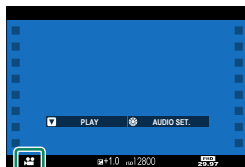Any movie selected after the  button is pressed to begin playback will be indicated by a  icon. Press the focus stick (focus lever) down to start movie playback.

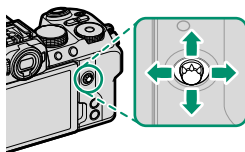


The following operations can be performed while a movie is displayed:



Focus stick (focus lever)	Full-frame playback	Playback in progress ()	Playback paused ()
Up	View photo information	End playback	
Down	Start playback	Pause playback	Start/resume playback
Left/right	View other pictures	Adjust speed	Single frame rewind/advance

Progress is shown in the display during playback.

 Do not cover the speaker during playback.

