



## Mode S: Shutter-Priority AE

Choose a shutter speed and let the camera adjust aperture for optimal exposure.

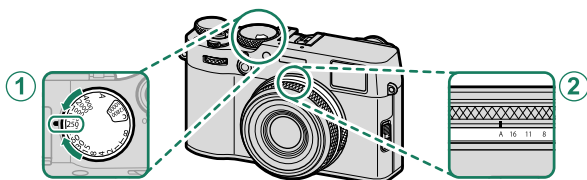

| Setting                |               |
|------------------------|---------------|
| ① <b>Shutter speed</b> | User-selected |
| ② <b>Aperture</b>      | A (auto)      |

Confirm that **S** appears in the display.

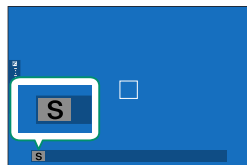

- ❗ If the correct exposure cannot be achieved at the selected shutter speed, aperture will be displayed in red.
- If the subject is outside the metering range of the camera, the aperture display will show “— — —”.

- 📷 Shutter speed can also be adjusted in increments of  $\frac{1}{3}$  EV by rotating the rear command dial.
- Shutter speed can be adjusted while the shutter button is pressed halfway.