



Connecting via Wired LAN (Ethernet)

Connect to Frame.io via wired LAN (Ethernet).


- 1 Connect to the network by plugging an Ethernet cable into the camera's LAN connector.
- 2 Select **Frame.io Camera to Cloud** > **CONNECT**.

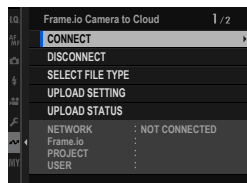

- 3 Select **WIRED LAN**.

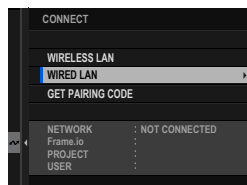

- 4 Adjust **IP ADDRESS SETTING**.
 - Select **AUTO** to use an IP address assigned by the network.
 - Select **MANUAL** to choose the IP address manually as described in "Connecting Using an IP Address" (📖 273).

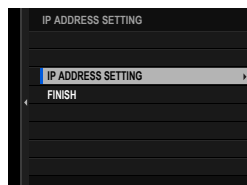

- 5 Once connected, select **GET PAIRING CODE**.

A pairing code will be displayed.

