


The Digital Teleconverter

Use the digital teleconverter to further magnify the image while processing it for sharp, high-resolution results.

- 1 Assign **DIGITAL TELE-CONV.** to the control ring (📖 12).
- 2 Choose the zoom angle using the control ring.

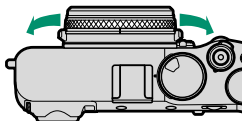

Standard (35 mm)*



*50 mm**



*70 mm**



* 35 mm format equivalent

- 3 Take pictures at the selected zoom angle.

- ❗ Image quality drops slightly at **DIGITAL TELE-CONV.** settings of 50 and 70 mm.
 - The digital teleconverter cannot be used when a RAW option is selected for image quality.
 - Selecting a RAW option for image quality disables the digital teleconverter.
 - The digital teleconverter may be unavailable in some modes.
- 📷 Digital teleconverter settings can also be accessed via **SHOOTING SETTING > DIGITAL TELE-CONV.**
 - The zoom angles available when a conversion lens is attached are 72 and 100 mm for telephoto conversion lenses (teleconverters) and 41 and 58 mm for wide-angle conversion lenses.