


2 Press the shutter button to start recording.

- A recording indicator (●) is displayed while recording is in progress.
- The borders of the display turn red during movie recording, green during high-speed recording.
- The time remaining is shown by a countdown display, while another display counts up to show the recording time.

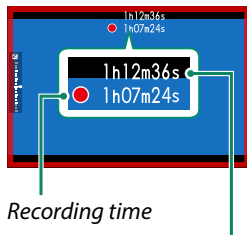

Recording time

Time remaining

- ## 3 Press the shutter button again to end recording.
- Recording ends automatically when the maximum length is reached or the memory card is full.