

Function Controls


Assign roles to the function buttons, function dial, or touch-function gestures for quick access to the selected features.

The Function Buttons

Assign a role to the function buttons for quick access to the selected feature.

Function Button Defaults

The default assignments are:

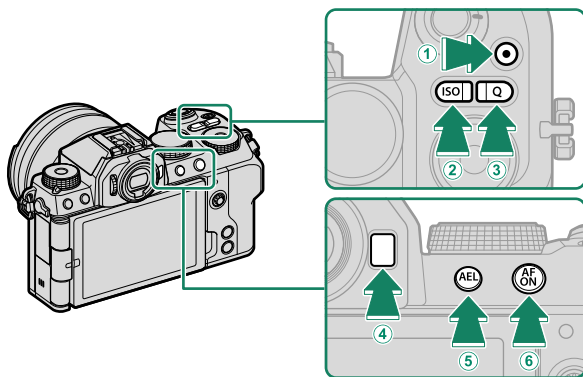

Function buttons	Default
① • (movie recording) button	MOVIE RECORDING RELEASE
② ISO button	ISO
③ Q (quick menu) button	QUICK MENU
④ Fn button	WHITE BALANCE
⑤ AEL (exposure lock) button	AE LOCK ONLY
⑥ AFON button	AF-ON