


The DRIVE/DELETE Button

Pressing the **DRIVE/DELETE** button displays the drive-mode menu.

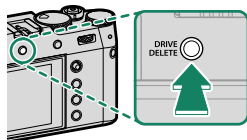

Mode	
STILL IMAGE	44
CONTINUOUS	
CH CH HIGH SPEED BURST	89
CL CL LOW SPEED BURST	
ISO BKT	85
WHITE BALANCE BKT	85

Mode	
BKT BKT	86
HDR	90
	92
Adv. Adv. MODE	95
	97
MOVIE	50