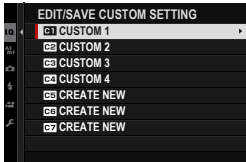
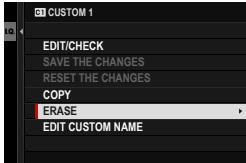


Deleting Custom Settings

Delete settings from selected custom settings banks.

- 1 Select **IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING** in the shooting menu and press **MENU/OK**.
- 2 Highlight the desired custom settings bank and press **MENU/OK**.
 
- 3 Highlight **ERASE** and press **MENU/OK**. A confirmation dialog will be displayed.
 
- 4 Highlight **OK** and press **MENU/OK**. Any custom settings saved to the selected bank will be deleted.
 