




MOVIE SETTING (Still Photography)

Adjust options for movies shot during still photography using function buttons that have been assigned **MOVIE RECORDING RELEASE**.

To display movie settings, press **MENU/OK** in the photo shooting display and select the  (**MOVIE SETTING**) tab.

 The options available vary with the shooting mode selected.

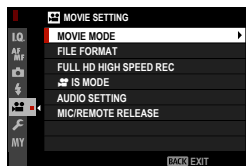

MOVIE MODE

This item is also found in the movie menus (📖 155). Changes here also apply to the item in the movie menus.

FILE FORMAT

This item is also found in the movie menus (📖 156). Changes here also apply to the item in the movie menus.

FULL HD HIGH SPEED REC

This item is also found in the movie menus (📖 157). Changes here also apply to the item in the movie menus.

IS MODE

This item is also found in the movie menus (📖 161). Changes here also apply to the item in the movie menus.