





## MOVIE SETTING (Still Photography)


Adjust options for movies shot during still photography using the  (movie recording) button.

To display movie settings, press **MENU/OK** in the photo shooting display and select the  (**MOVIE SETTING**) tab.

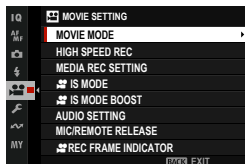


 The options available vary with the shooting mode selected.


### MOVIE MODE

This item is also found in the movie menus ( 187). Changes here also apply to the item in the movie menus.

### HIGH SPEED REC

This item is also found in the movie menus ( 189). Changes here also apply to the item in the movie menus.

### MEDIA REC SETTING

This item is also found in the movie menus ( 190). Changes here also apply to the item in the movie menus.