



The Mode Dial

To select a shooting mode, rotate the dial until the icon for the desired mode aligns with the index.

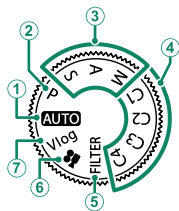

Mode	Description	
① AUTO (AUTO)	The camera automatically optimizes settings to the scene. You also have the option of choosing the desired scene mode yourself.	48
② P (PROGRAM AE)	Aperture and shutter speed can be adjusted using program shift.	71
③ S (SHUTTER PRIORITY AE) A (APERTURE PRIORITY AE) M (MANUAL)	Select for full control over camera settings, including aperture (M and A) and/or shutter speed (M and S).	73 75 77
④ C1/C2/C3/C4 (CUSTOM 1/2/3/4)	Take pictures using previously-stored settings.	82
⑤ FILTER (FILTER)	Take photos with filter effects.	81
⑥  (MOVIE)	Record movies.	57
⑦ Vlog (Video blog)	Record movies at settings suitable for vlogs (video blogs).	58