


SCREEN SETTING

Make changes to display settings.

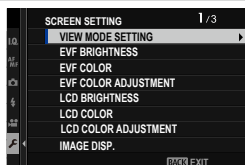





To access display settings, press **MENU/OK**, select the **[SET UP]** tab, and choose **SCREEN SET-UP**.



VIEW MODE SETTING

Turn the eye sensor, viewfinder (EVF or OVf), or LCD monitor on or off. Separate settings are available for shooting and playback.

SHOOTING

Option	Description
 EYE SENSOR	Putting your eye to the viewfinder turns the viewfinder on and the LCD monitor off; taking your eye away turns the viewfinder off and LCD monitor on.
 VIEWFINDER ONLY	Viewfinder on, LCD monitor off.
 LCD ONLY	LCD monitor on, viewfinder off.
 VIEWFINDER ONLY + 	Putting your eye to the viewfinder turns the viewfinder on; taking it away turns the viewfinder off. The LCD monitor remains off.
 EYE SENSOR + LCD IMAGE DISP.	Putting your eye to the viewfinder during shooting turns the viewfinder on, but the LCD monitor is used for the display of images once you remove your eye from the viewfinder after shooting.