


## The Command Dial

The front command dial is used for the operations below.

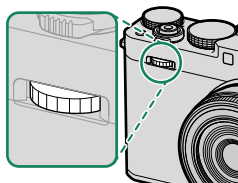

### Shooting

- Choose the desired combination of shutter speed and aperture (program shift).
- Choose a shutter speed.
- Adjust aperture.
- Adjust exposure compensation.
- Adjust sensitivity.



- During shooting, the role of the front command dial changes each time the center of the dial is pressed.
- For information on the roles performed by the dials during shooting, see “Front Command Dial Roles by Mode” (📖 67).

### Menus

Rotate the dial to select menu tabs or page through menus.

### Q Menu

Rotate the dial to change settings in the quick menu and press the center of the dial to select.

### Playback

- View other pictures.
- Zoom in or out during full- or multi-frame playback.



- Press the center of the front command dial to switch between the two roles.