



## Recording Movies

This section describes how to film movies in auto mode.

- 1 Press the **DRIVE/DELETE** button and select **MOVIE** in the drive-mode menu.

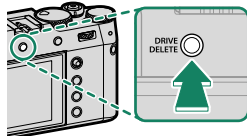

- 2 Adjust settings for program AE.

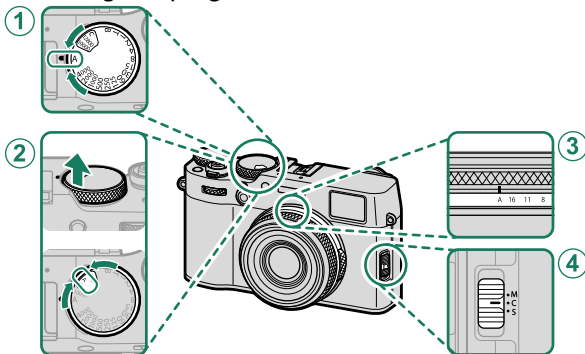

Setting		
① Shutter speed	A (auto)	56
② Sensitivity	A (auto)	77
③ Aperture	A (auto)	56
④ Focus mode	C (Continuous AF)	66