


## Choose Camera

The views through the lenses of the connected cameras are shown in a thumbnail list. Click or tap a thumbnail to select a camera to control.

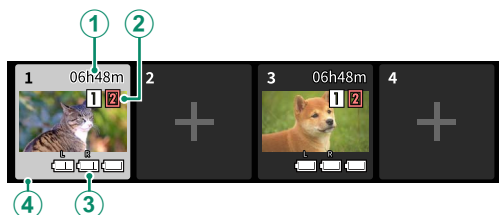

Setting	Description
① <b>Recording time available</b>	The remaining recording time. When the time remaining grows short, the thumbnail will flash and the recording time will be displayed in red.
② <b>Card slot options</b>	Camera storage settings. The icon for the current slot is shown in orange. The display turns red if the camera is unable to record to the current card.
③ <b>Battery level</b>	The battery level. The thumbnail will flash when the battery runs low.
④ <b>Thumbnail frame</b>	A frame appears around the thumbnail for the current camera. Regardless of whether they are currently selected, cameras that are currently recording are highlighted in red or, during high-speed recording, in green.