



## Inserting the Battery and a Memory Card

Insert the battery and memory card as described below.

### 1 Open the battery-chamber cover.


Slide the battery-chamber cover latch as shown and open the battery-chamber cover.

- Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could damage image files or memory cards.
- Do not use excessive force when handling the battery-chamber cover.

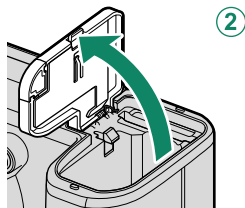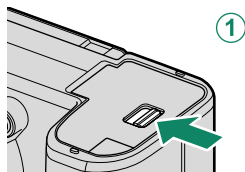

### 2 Insert the battery as shown.

- Insert the battery in the orientation shown. **Do not use force or attempt to insert the battery upside down or backwards.**
- Confirm that the battery is securely latched.

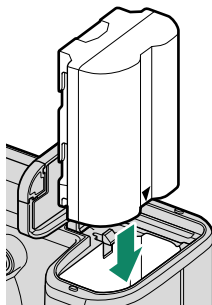

### 3 Insert the memory card.

