


Parts of the Camera

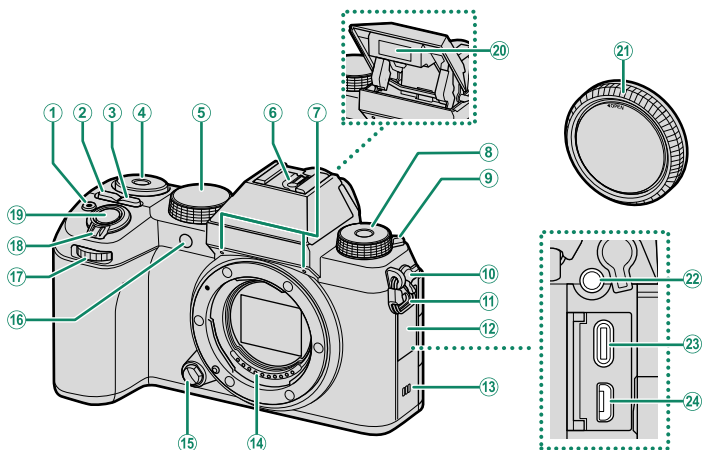

| | | | | | |
|----|--|-----------|----|--|---------|
| 1 | • (movie recording) button..... | 56 | 14 | Lens signal contacts | |
| 2 | Q (quick menu) button..... | 311 | 15 | Lens release button | 33 |
| 3 | ISO button..... | 317 | 16 | AF-assist illuminator..... | 155 |
| 4 | Rear command dial | 6, 223 | | Self-timer lamp | 169 |
| 5 | Mode dial | 4, 48, 56 | | Tally light | 200 |
| 6 | Hot shoe..... | 338 | 17 | Front command dial..... | 6 |
| 7 | Microphone..... | 61, 214 | 18 | ON/OFF switch | 41 |
| 8 | Fn (function) dial | 7, 320 | 19 | Shutter button | 49 |
| 9 | ⚡ (flash pop-up) lever..... | 123 | 20 | Flash | 123 |
| 10 | Microphone/remote release connector cover | | 21 | Body cap..... | 33 |
| 11 | Strap clip..... | 32 | 22 | Microphone/remote release connector (ø3.5 mm) | 61, 215 |
| 12 | Connector cover | | 23 | USB connector (Type-C) | 37, 246 |
| 13 | Speaker | 63, 277 | 24 | HDMI Micro connector (Type D) | 51 |

! 22 Use of an optional RR-100 remote release requires a third-party adapter to convert the three-pin, ø2.5 mm connector to a three-pin, ø3.5 mm connector.