


P, S, A, and M Modes

P, S, A, and M modes give you varying degrees of control over shutter speed and aperture.


Mode P: Program AE

Let the camera choose shutter speed and aperture for optimal exposure. Other values that produce the same exposure can be selected with program shift.


- 1 Rotate the **STILL/MOVIE** mode dial to **STILL**.

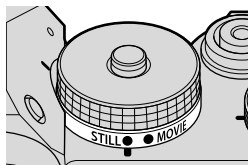

- 2 Slide the lens aperture mode switch to **A**.

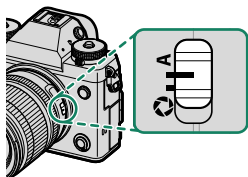

- 3 Rotate the shutter speed dial to **A**.

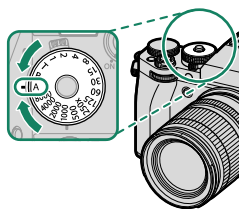

P will appear in the display.

