


# Parts of the Camera

The parts of the camera are listed below.

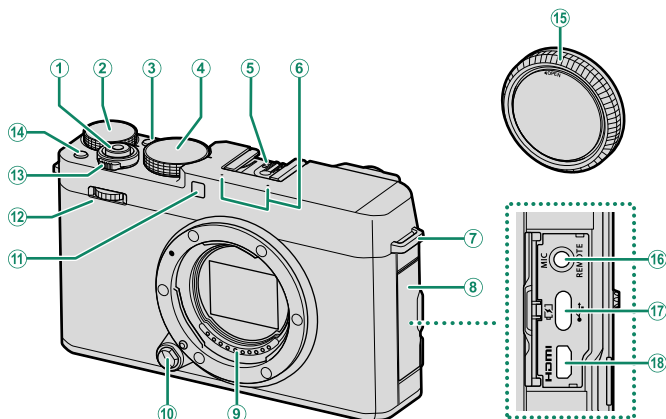

① Shutter button.....	44	⑪ AF-assist illuminator.....	131
② Exposure compensation dial.....	4, 80	Self-timer lamp.....	141
③ Q (quick menu) button.....	247	Tally light.....	163
④ Shutter speed dial		⑫ Front command dial.....	6
.....	4, 56, 59, 63, 65	⑬ ON/OFF switch.....	35
⑤ Hot shoe.....	267	⑭ Fn button.....	253
⑥ Microphone.....	50, 175	⑮ Body cap.....	29
⑦ Strap eyelet.....	28	⑯ Microphone/remote release connector	
⑧ Connector cover		(ø3.5 mm).....	3, 50, 154
⑨ Lens signal contacts		⑰ USB connector (Type-C).....	33, 50, 287
⑩ Lens release button.....	29	⑱ HDMI Micro connector (Type D).....	282