
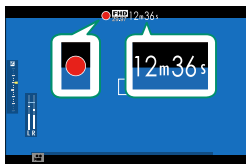



Using a Function Button (MOVIE RECORDING RELEASE)

Use the function button to which **MOVIE RECORDING RELEASE** is assigned to quickly and easily record movies while in still photography mode.

 The camera automatically enables autoexposure and selects **CONTINUOUS AF** for focus mode.

- 1 Assign **MOVIE RECORDING RELEASE** to a function button (📖 253).
- 2 Press the selected button to start recording.
 - A recording indicator (●) is displayed while recording is in progress.
 - The display shows the elapsed recording time.
- 3 Press the button again to end recording.
Recording ends automatically when the movie reaches 29 minutes 59 seconds or the memory card is full.



 The movie recording release option is intended for point-and-shoot movie recording; camera settings cannot be adjusted.

Temperature Warnings

The camera automatically turns off to protect itself when its temperature or the temperature of the battery rises. If a temperature warning is displayed, image noise may increase. Turn the camera off and wait for it to cool before turning it on again (📖 327).