


Movie Mode

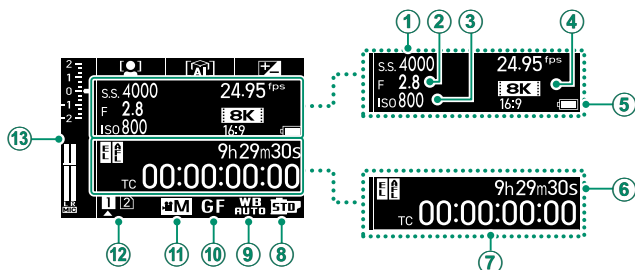

Default	
① SHUTTER SPEED	⑧ FILM SIMULATION
② APERTURE	⑨ WHITE BALANCE
③ ISO	⑩ MOVIE FORMAT
④ MOVIE MODE	⑪ SHOOTING MODE
⑤ BATTERY LEVEL	⑫ CARD SLOT OPTIONS
⑥ REMAINING TIME	⑬ Expo.Comp. & MIC LEVEL
⑦ TIME CODE	

MOVIE MODE, BATTERY LEVEL, and CARD SLOT OPTIONS cannot be changed in the settings.

Checking the functions assigned to function buttons

The functions assigned to the **Fn1**, **Fn2**, and **Fn3** buttons in **2 BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING** can be checked on the secondary LCD monitor.

- ① **Fn1** button
- ② **Fn2** button
- ③ **Fn3** button

