


USER SETTING

Adjust basic camera settings.

To access basic camera settings, press **MENU/OK**, select the **⚙️ (SET UP)** tab, and choose **USER SETTING**.

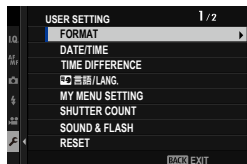


FORMAT

To format a memory card:

- 1 Select **⚙️ USER SETTING > FORMAT** in the **⚙️ (SET UP)** tab.
- 2 Highlight the slot containing the card you wish to format and press **MENU/OK**.
- 3 A confirmation dialog will be displayed. To format the memory card, highlight **OK** and press **MENU/OK**.



To exit without formatting the memory card, select **CANCEL** or press **DISP/BACK**.

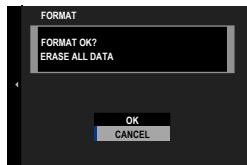

- All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.
- Do not open the battery-chamber cover during formatting.



The format menu can also be displayed by pressing the center of the rear command dial while pressing and holding the **DRIVE/DELETE** button.