


The Playback Menu

Adjust playback settings.


The playback menu is displayed when you press **MENU/OK** in playback mode.

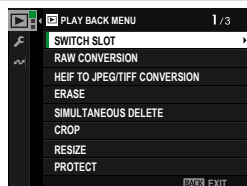

SWITCH SLOT

Choose the card or SSD from which images will be played back.



If two memory cards are inserted, you can press and hold the  button during playback to choose a card for playback.