


instax PRINTER CONNECTION SETTING

Adjust settings for connection to optional Fujifilm instax SHARE printers.

The Printer Name (SSID) and Password

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.

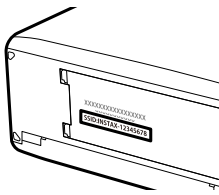

Frame.io Camera to Cloud

Adjust settings for use with Frame.io.

CONNECT

Connect to Frame.io.

Option	Description
WIRELESS LAN	Connect via wireless LAN.
WIRED LAN	Connect via wired LAN.
GET PAIRING CODE	View the pairing code for connection to the Frame.io project.



The pairing code can only be viewed when the camera is connected to Frame.io.

DISCONNECT

End the connection to the Frame.io project and terminate the network connection.