
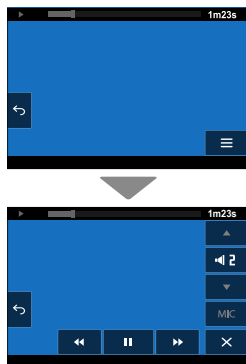











Playback controls can be displayed by tapping  during playback.



Control	Function
 Pause	Pause playback. Tap again to resume.
 /  Rewind/advance	Rewind or advance the movie. When playback paused, you can tap these buttons to rewind or advance a frame at a time.
 /  Volume	Adjust playback volume.
 Channel selection	Adjust audio settings for use when viewing 4ch movies.
 Close	Hide movie playback controls.
 Back	End playback and return to the shooting display.

 Volume adjustment and channel selection are not available while playback is in progress. Pause playback to use these controls.