



## Recording Movies

Record movies with sound.


### Recording Movies

Movies can be recorded by pressing the shutter button when  (movie) is selected in the drive-mode menu or by pressing the function button to which **MOVIE RECORDING RELEASE** is assigned.

#### The Drive-Mode Menu ( Movie)

Selecting  (movie) in the drive-mode menu and recording movies using the shutter button gives you control over a variety of camera settings.


- 1 Press the **DRIVE/DELETE** button and select **MOVIE** in the drive-mode menu.

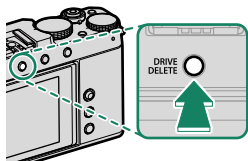

- 2 Press the shutter button all the way down.

Recording will start.

- A recording indicator (●) is displayed while recording is in progress.
- The display shows the elapsed recording time.

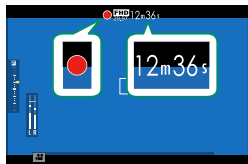

- 3 Press the shutter button again to end recording.  
Recording ends automatically when the movie reaches 29 minutes 59 seconds or the memory card is full.