
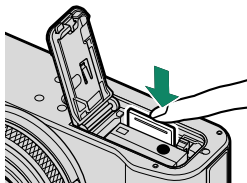


3 Insert the memory card.


Holding the card in the orientation shown, slide it in until it clicks into place at the back of the slot.


 Be sure card is in the correct orientation; do not insert at an angle or use force.




4 Close the battery-chamber cover.


Close and latch the cover.

 If the cover does not close, check that the battery is in the correct orientation. Do not attempt to force the cover shut.

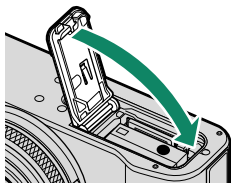

5 Format the memory card (📖 200).

 Format memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device.

 Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could damage image files or memory cards.