

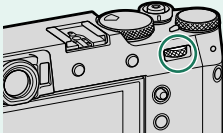



## The Command Dials

Rotate or press the command dials to:

	Front command dial	Rear command dial
 <p><b>Rotate</b></p>	 <ul style="list-style-type: none"> <li>• Select menu tabs or page through menus</li> <li>• Adjust aperture<sup>1,2</sup></li> <li>• Adjust exposure compensation<sup>2,5</sup></li> <li>• Adjust sensitivity<sup>2,3</sup></li> <li>• View other pictures during playback</li> </ul>	 <ul style="list-style-type: none"> <li>• Highlight menu items</li> <li>• Choose the desired combination of shutter speed and aperture (program shift)</li> <li>• Choose a shutter speed<sup>2</sup></li> <li>• Adjust settings in the quick menu</li> <li>• Choose the size of the focus frame</li> <li>• Zoom in or out in full frame playback</li> <li>• Zoom in or out in multi-frame playback</li> </ul>
 <p><b>Press</b></p>	<p>Choose the operation performed by rotating the front command dial<sup>2</sup></p> <ul style="list-style-type: none"> <li>• Perform the function assigned to the <b>DIAL</b> function button</li> <li>• Zoom in on the active focus point<sup>4</sup></li> <li>• Choose the manual focus mode focus display<sup>4</sup></li> <li>• Zoom in on the active focus point during playback</li> </ul>	

1 Aperture set to **A** (auto) and **COMMAND** selected for **■ BUTTON/DIAL SETTING > APERTURE RING SETTING (A)**.

2 Can be changed using **■ BUTTON/DIAL SETTING > COMMAND DIAL SETTING**.

3 **C** selected for sensitivity.

4 Available only if **FOCUS CHECK** is assigned to a function button.

5 Exposure compensation dial rotated to **C**.