



## Lenses with Aperture Rings


At settings other than **A**, you can adjust aperture by rotating the lens aperture ring (exposure modes **A** and **M**).

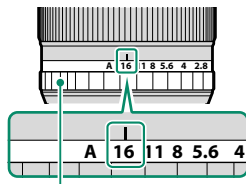


Aperture ring

- Selecting **ON** for **MOVIE OPTIMIZED CONTROL**  disables the aperture ring.
- If **COMMAND** is selected for **■ BUTTON/DIAL SETTING > APERTURE RING SETTING (A)** when the aperture ring is set to **A**, aperture can be adjusted by rotating the command dials.

### The Aperture Mode Switch

If the lens has an aperture mode switch, aperture can be adjusted manually by sliding the switch to  and rotating the aperture ring.

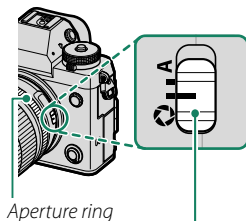

Aperture ring

Aperture mode switch