



## The Exposure Compensation Dial

Rotate the dial to choose an exposure compensation amount.

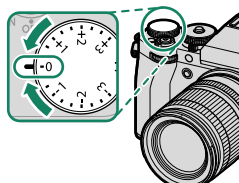

## The Drive Dial

Rotate the dial to choose from the following the drive modes.

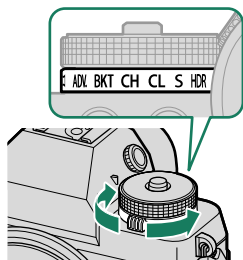

Mode		Mode	
Panorama	111	<b>CL</b> Low-speed burst	105
<b>ADV.</b> Advanced filter	109	<b>S</b> Single frame	52
<b>BKT</b> Bracketing	103	HDR	107
<b>CH</b> High-speed burst	105		