



Flash Photography


Use the built-in flash for additional lighting when shooting at night or indoors under low light.

- 1 Select **FLASH FUNCTION SETTING** in the **FLASH SETTING** menu. The camera will display options for the built-in flash.

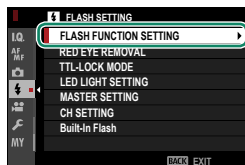



 This feature can also be accessed via shortcuts (📖 244).

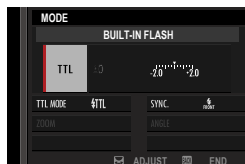- 2 Highlight items using the focus stick (focus lever) and rotate the rear command dial to change the highlighted setting (📖 100).



- 3 Press **DISP/BACK** to put the changes into effect.

-  Depending on the distance to the subject, the lens may cast shadows in photos taken with the flash.
- The flash will not fire at some settings, for example in panorama mode or when the electronic shutter is used.
- Choose shutter speeds slower than $\frac{1}{2000}$ s when using the flash in exposure mode **S** (shutter-priority AE) or manual (**M**).
-  In TTL mode, the flash may fire several times with each shot. Do not move the camera until shooting is complete.
- The flash will not fire if **OFF** is selected for **SOUND & FLASH** in the **USER SETTING** menu.
- Optional lens hoods are not recommended for use with the built-in flash as they may cast shadows that cause vignetting.