


FLASH SETTING (Still Photography)

Adjust flash-related settings for still photography.


To display flash settings, press **MENU/OK** in the photo shooting display and select the **⚡ (FLASH SETTING)** tab.

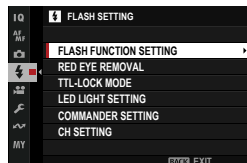

FLASH FUNCTION SETTING

Choose a flash control mode, flash mode, or sync mode or adjust the flash level. The options available vary with the flash.

For more information on flash settings, see “External Flash Units” (341) in “Peripherals and Optional Accessories”.

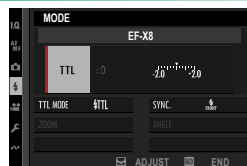

RED EYE REMOVAL

Remove red-eye effects caused by the flash.

| Option | Description |
|--------------|--|
| FLASH | Flash red-eye reduction only. |
| OFF | Flash red-eye reduction and digital red-eye removal off. |

Flash red-eye reduction can be used in TTL flash control mode.