


## Touch Controls for Focus Zoom

Different touch controls are used during focus zoom (focus check enabled).

### Central Area

Tapping the center of the display performs the operations below.

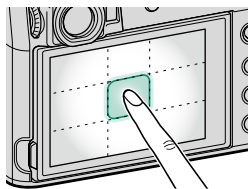

Mode	Still Photography	Movie Recording
TOUCH SHOOTING	AF-S/MF: Take a picture	AF-S: AF
		MF: Instant AF
AF	AF-S: AF	AF-S: AF
	MF: Instant AF	MF: Instant AF
AREA	AF-S: AF	AF-S: AF
	MF: Instant AF	MF: Instant AF
OFF	AF-S/MF: OFF	AF-S/MF: OFF

### Other Areas

Tapping other areas simply scrolls the display, whether during still photography or movie recording and regardless of the option selected for touch screen mode.

