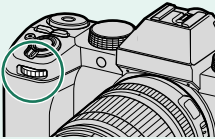
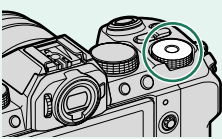


The Command Dials

The rear and front command dials are used for the operations below.

		Front command dial	Rear command dial
Shooting ¹	AUTO		
	P	Choose an auto/scene mode.	Adjust exposure compensation.
	S	Choose the desired combination of shutter speed and aperture (program shift).	
	A	Choose a shutter speed.	
	M	Adjust aperture. ²	Choose a shutter speed.
	FILTER	Adjust aperture. ²	Adjust exposure compensation.
Menus		Select menu tabs or page through menus.	Highlight menu items.
Q Menu		Select items in the quick menu.	Adjust settings in the quick menu.
Playback		View other pictures.	<ul style="list-style-type: none"> • Zoom in or out (full-frame playback). • Zoom in or out (multi-frame playback).

1 Can be changed using **■** **BUTTON/DIAL SETTING** > **COMMAND DIAL SETTING**.

2 Applies if the lens has no aperture ring or if an aperture ring with an "A" position is in the A position.

 The rotation direction for the command dials can be selected using **■** **BUTTON/DIAL SETTING** > **COMMAND DIAL DIRECTION**.